

INSTALLATION OF **WALL MOUNT**




MOUNTING HARDWARE

COMPONENTS	SIZES	QTY	IMAGES
Wall Anchor Bolt	M8	04	
Allen Bolt	M4	04	
Washers	M4	04	
Locknuts	M4	04	
Allen key (Not Included in Hardware Kit)	M4	01	
Spanner (Not Included in Hardware Kit)	7mm	01	
Spanner (Not Included in Hardware Kit)	13mm	01	


Step 1: Align the Brackets and Holes

1.1 Visually match the portal holes on the main surface to the corresponding holes on the bracket.

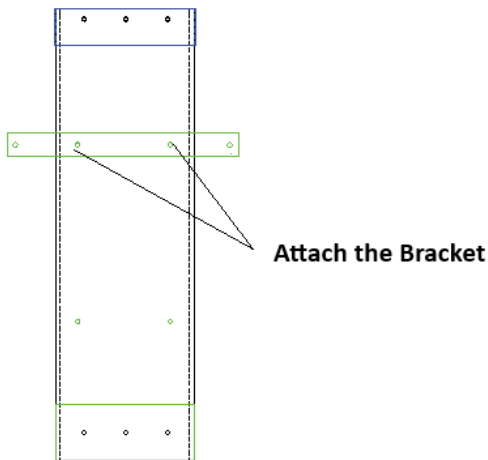


Step 2: Attach the Bracket

2.1 Position the bracket so its mounting holes align precisely with the corresponding holes on the surface. Hold the bracket firmly in place to maintain alignment.

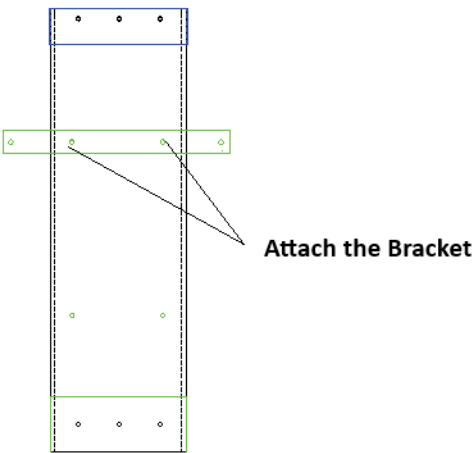

Step 3: Insert and Tighten the Screws

3.1 Now you can fix it with the screws. With the bracket held in place, insert a screw into each of the aligned holes. Using the appropriate Allen key M4, tighten each screw until the bracket is securely fastened to the surface.

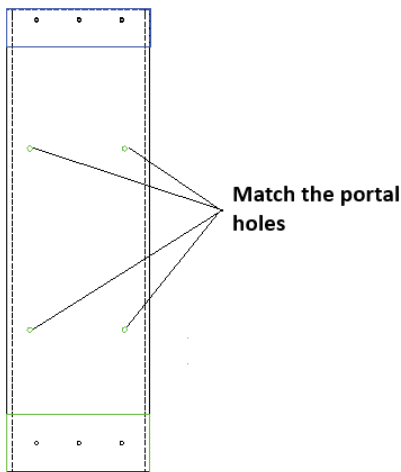

CONTACT US FOR HELP OR MORE DETAILS